

A detailed black and white line drawing of various flowers, including roses and peonies, with leaves and stems, filling the background of the page.

MegPad

A25Q5 User Guide

The contents of the manual are for reference only,
and everything is subject to the actual product.

Android is a trademark of Google LLC.

Contents

Safety Warnings and Precautions	2
Precautions	2
Safety Tips! (Stability Hazard)	2
Important Network Service Statement	2
Packing list	3
Product Installation	4
Functions Of Keys	6
Interface Functions	7
Battery	7
Basic Operations	8
Power-on/Standby	8
Touch Operation	8
Attention	8
Wi-Fi Connection	8
Remote Control Connection	11
Remote Control	14
Screen Mirroring	15
Single double-click wake-up	17
Color Temperature Adjustment	18
Navigation Bar Mode	18
Application Split Screen	20
Technical Specifications	21

Safety Warnings and Precautions

Precautions

1. Before using the product, please read all instructions carefully.
2. When cleaning the product's screen, be sure to unplug the power cord, turn off the power switch, and wipe the screen with a soft damp cloth. If the screen is still not clean, use an LCD screen cleaner. Do not use liquid cleaning solutions or spray cleaners.
3. Do not use accessories not recommended by the manufacturer, as this may cause danger.
4. When unplugging the power cord, hold the power plug with your hand; do not pull the power cord directly with your hand.
5. This product can only use the type of power supply indicated on its nameplate. If you have any questions about the type of power supply used, please consult the product dealer or the local power supply bureau.
6. Since there is high voltage or other dangers when opening or moving the cabinet, do not repair it yourself. You can contact maintenance personnel with relevant qualifications for comprehensive maintenance.
7. In the following situations, first turn off the socket power, then unplug the power plug from the socket and contact maintenance personnel with relevant qualifications for repair:
 - a. The power cord or power plug is damaged or worn.
 - b. The screen is dropped or the cabinet is damaged.
 - c. When obvious abnormalities appear on the screen, it indicates that maintenance is needed.
8. Please place the product in a well-ventilated environment, away from strong light, high temperature or humidity.
9. Please store the product at a room temperature between 0°C and 40°C. If it exceeds this range, normal use may be affected.

Safety Tips! (Stability Hazard)

The product may fall, causing serious personal injury. It is recommended to take the following simple preventive measures to avoid this:

Be sure to use the parts provided by the manufacturer and install them strictly in accordance with the installation method provided by the manufacturer.

Be sure to place the product on a horizontal ground for use.

Prevent children from climbing and touching the screen.

When charging, pay attention to the position of the power cord to avoid being pulled or tripped over.

Do not place the product in an unstable or tilted position.

Do not place cloth or other items between the product and the desktop.

Do not place toys, remote controls and other items that may lure children to climb on the product.

Important Network Service Statement

All content and services obtained from this product are owned by third parties and are protected by copyright, patent, trademark or other intellectual property laws. These contents and services are only for your personal non-commercial use and shall not be used without the authorization of the content owner or service provider.

Under no circumstances shall the company be liable for any direct, indirect or accidental loss or damage caused to you or any third party by accessing any content or service, any information or third-party software through this product.

Third-party services may be changed, removed or terminated without prior notice. The company does not guarantee or state that certain services or content are accessible at all times.

The company shall not be responsible for any services related to these contents and services at any time, nor shall it assume any customer service responsibilities.

For any questions or service requests related to these contents and services, please contact your content or service provider directly.


Packing List




Monitor ×1



Manual ×1

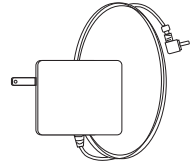


Adapter ×1

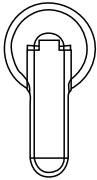

Base plate
(at the rear of the machine)



Battery ×2

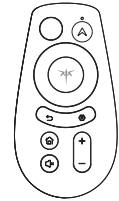

Remote control ×1


If any of the above are missing, please contact your product distributor.

Note: Please refer to the actual configuration for specific accessories. Please save all packaging materials for future removal.

Product Installation


01

Open the carton
Take out the protective foam

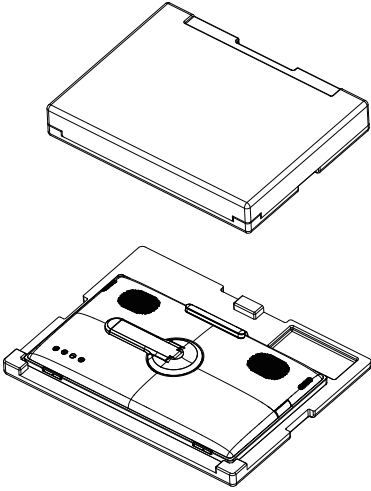


02

Please handle the product carefully and place it on a flat, clean desktop

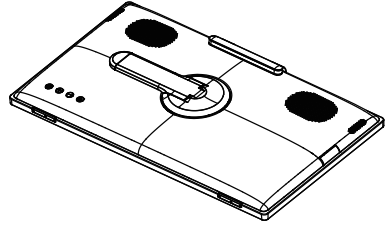


03

The base bracket on the back of the product can rotate 90°, supporting both horizontal and vertical screen directions

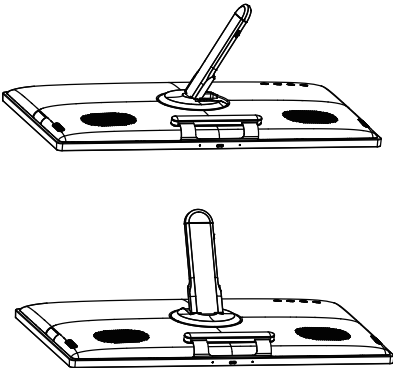

04


If using this product horizontally, please open the bracket at a 45° angle for use

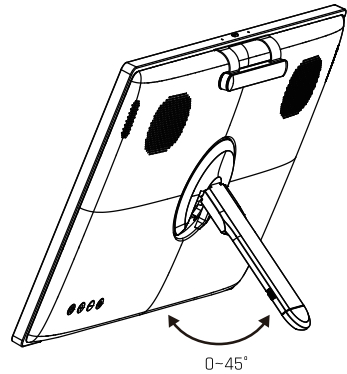

Product Installation


05

Fully extend the product support rod to its maximum length for use in longitudinal mode

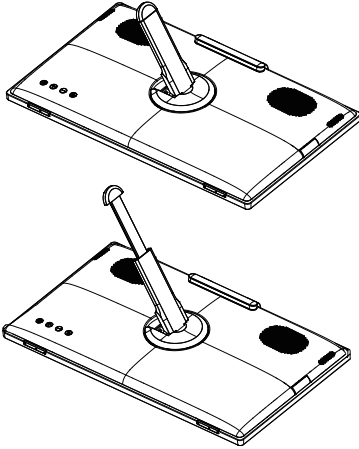


06

Used for vertical display of products (the handle is equipped with a magnetic fixing device, which can be attached to the back of the screen when vertical)

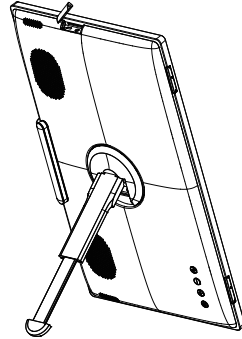

07


For the first use of this product, please insert the adapter and follow the instructions shown in the diagram

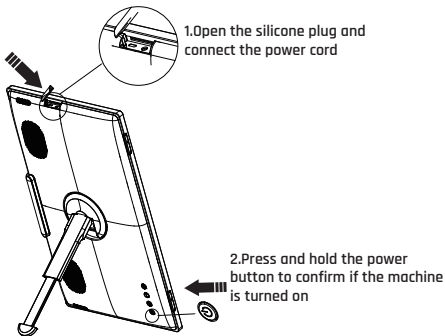


08

This product supports handheld carrying

1. Please place the product firmly on the desktop, then slide the side keys and compress the bracket for folding
2. Fold up the bracket on the back to carry it in hand

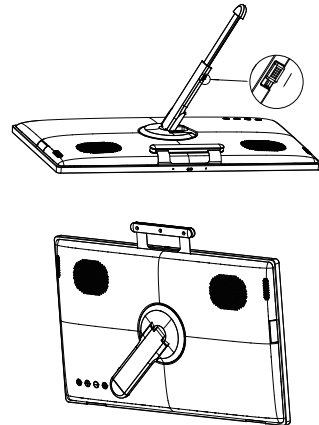


Functions Of Keys

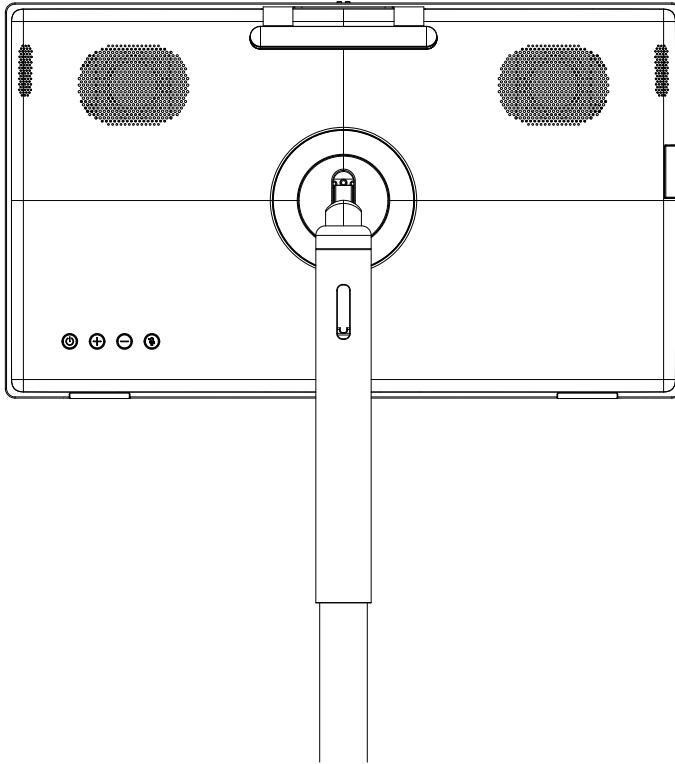



ON/OFF: Turn on or off the product



Power button

- In shutdown state: Long press the  button to start the device.

- During normal operation: Long press the  button to enter shutdown/restart; short press to turn off the screen.

- In screen - off state: Short press the  button to turn on the screen.



Volume +: Increase system volume




Volume -: Decrease system volume



Microphone Mute Button : Turn off the microphone

Interface Functions

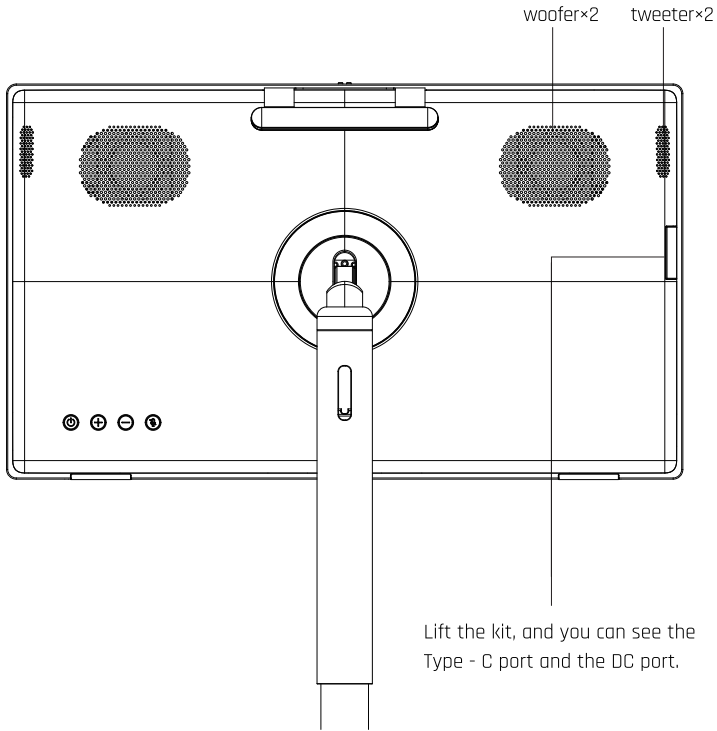


Battery

This product has a built-in battery and can be used for a period of time without connecting to other power sources. Please insert the adapter before attempting to power on for the first time or if it has not been used for a long time.

Type-C

Connect the Type-C cable to the Type-C port of this device and the Type-C interface of the external device respectively, and then functions such as Type-C transmission can be used.

Camera

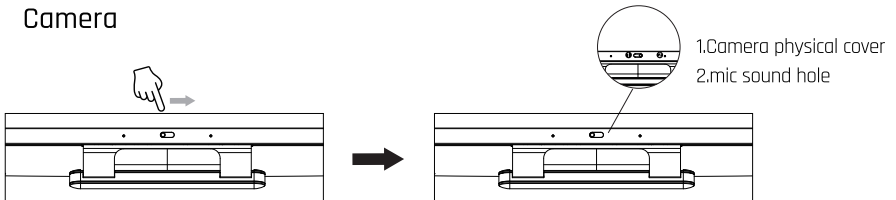

Slide the top camera cover to open/cover the camera.

Basic Operations

Power-on/Standby

Upon first use, connect to the adapter and press the power button on the back case for 3 seconds to power on the device. During normal working, swipe down from the top edge, and drop-down menu appears. Click "☰ > ☰ Power off", then the product enters Powered off state. Press [Restart] can reboot the machine.

Touch Operation

- Click: Tap on the screen.
 - Click and hold: Tap on the screen for 2s or longer.
 - Swipe: Swipe on the screen up, down, left and right.
 - Drag: Tap and hold the target (e.g., an application) to be moved, then swipe to the desired position.
 - Spread/ Pinch: Place two fingers on the screen, then open or close these fingers to zoom in or out the content displayed on the screen.
- Note: After the screen turns off, you can choose either "Single tap to wake" or "Double tap to wake" from the Settings-Display menu to awaken the screen.
- Click "Settings > System > Gestures > System navigation" to select the system navigation mode.


Attention:

- Whether the displayed content supports the zoom in/out function is related to the application. Please operate according to the actual condition.
- Avoid pressing the screen with force; where necessary, simply use your fingertip to tap on the desired item. If you wear gloves or use your fingernail to touch the screen, it is possible that the product cannot respond and be operated normally.
- If the screen is a little wet or too damp, the sensor cannot work normally when touching it.

Wi-Fi Connection


1. Connect at the power-on wizard

- After the MegPad is turned on for the first time or restored to factory settings, it enters the startup wizard interface

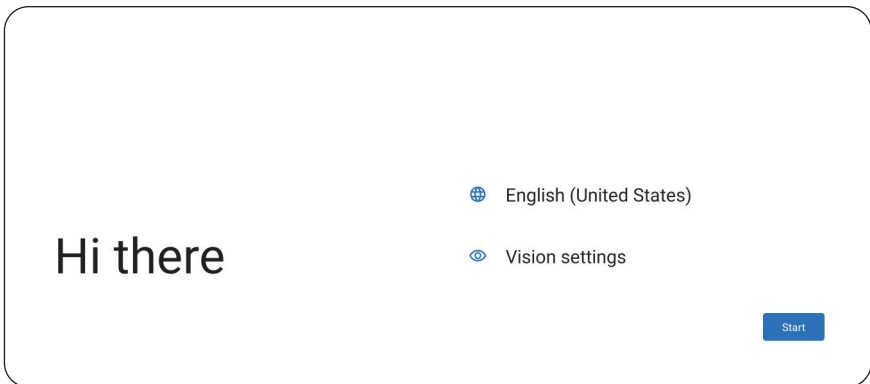


Basic Operations


- After clicking **[Start]**, you will enter the Wi-Fi connection interface

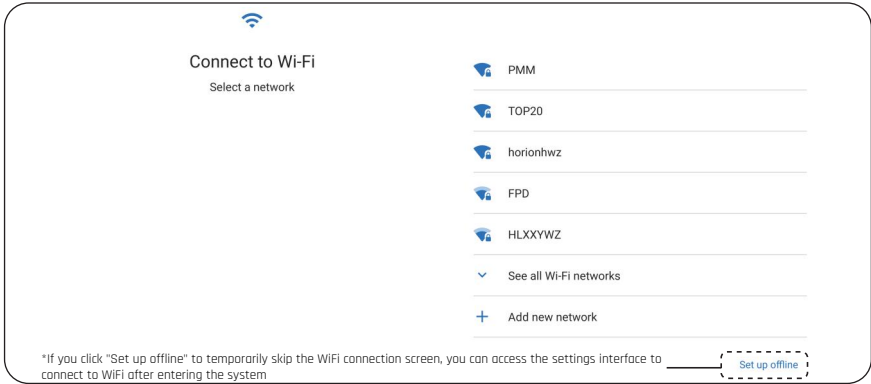

 - Tap the Wi-Fi network you wish to connect to. The Wi-Fi password input screen will appear. Enter the corresponding Wi-Fi password

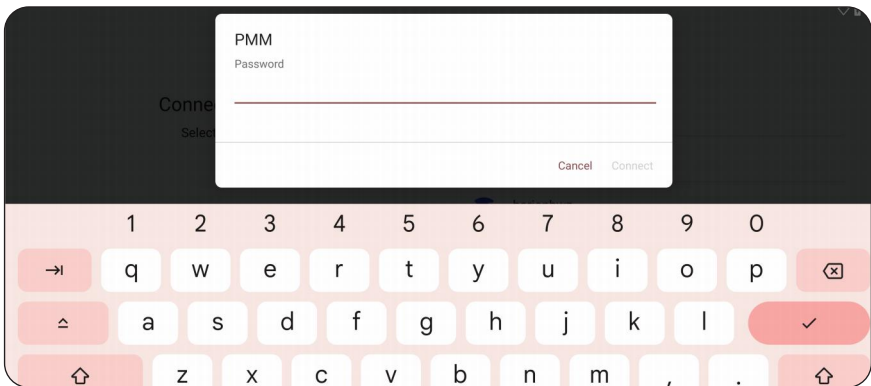


- After a successful connection, the following interface will appear (this interface may persist for several minutes). Subsequently, you will enter the data migration interface

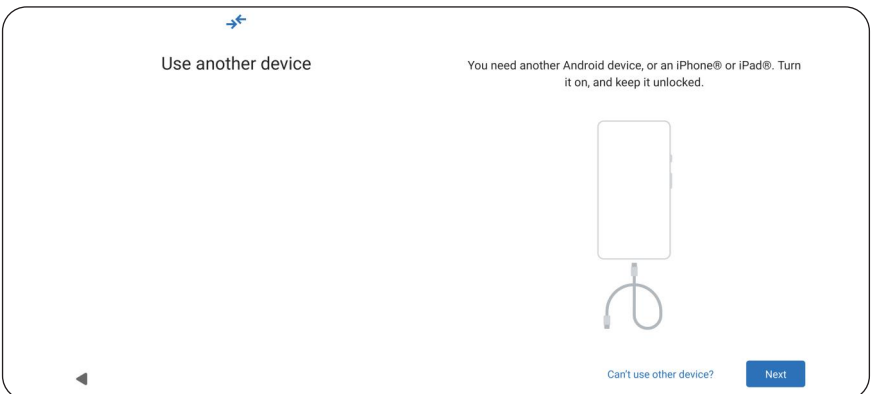


Basic Operations

2.Connect to Wi-Fi in the settings


- Tap **[Settings]** on the main screen to enter the settings interface

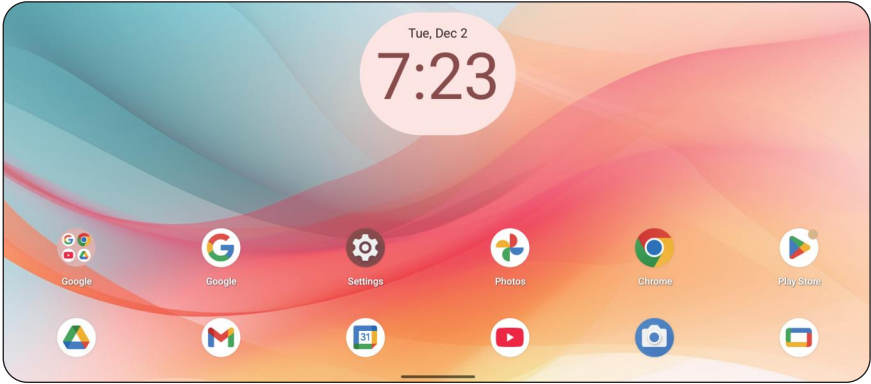


- Tap **[Network & Internet]**, then toggle the switch next to Wi-Fi (tap) to display the Wi-Fi list

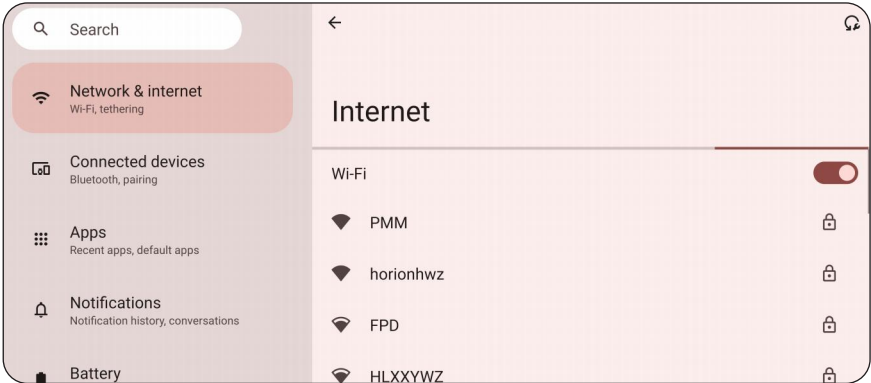


- Tap the Wi-Fi network you wish to connect to. Enter the password in the prompt that appears. After confirming the correct password, the connection will be established

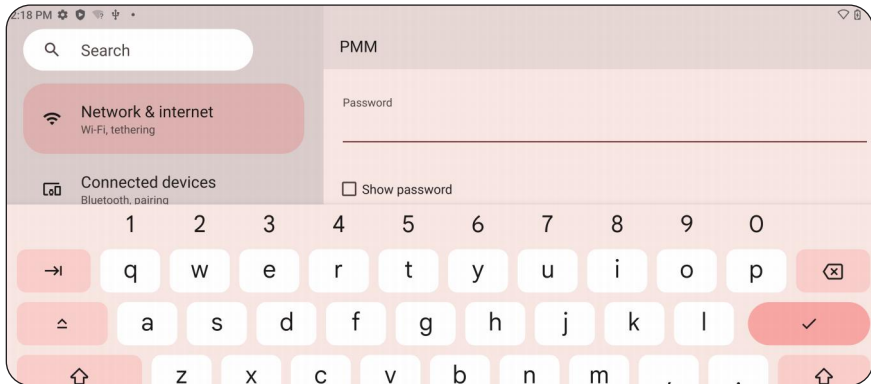

Basic Operations

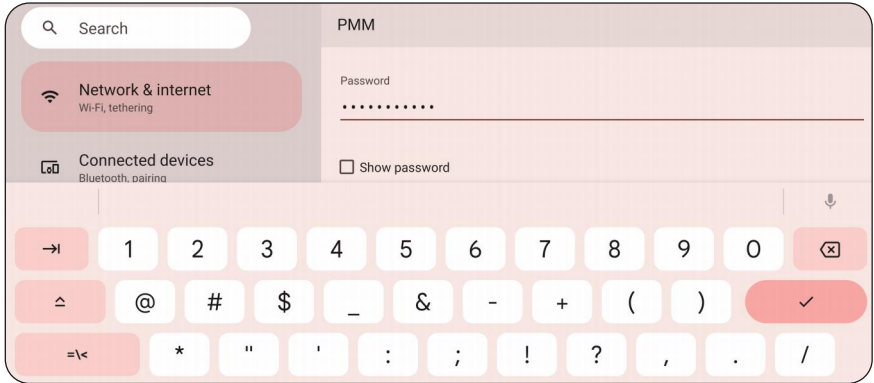 

 
- Connection successful indicator appears, displaying "connected" under the corresponding Wi-Fi network

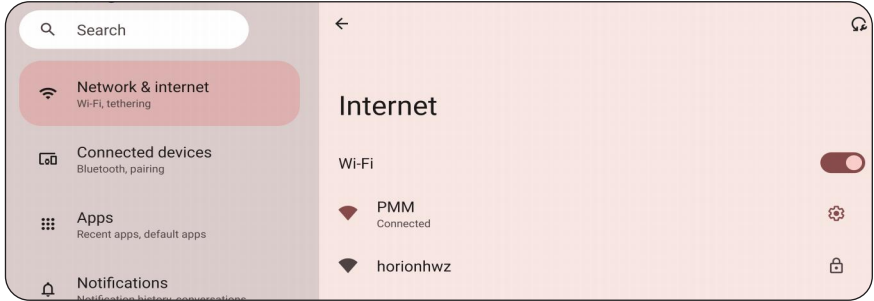

Remote Control Connection

1. Pairing at the power-on wizard

- The final page of the startup wizard displays the remote control pairing interface, shown below

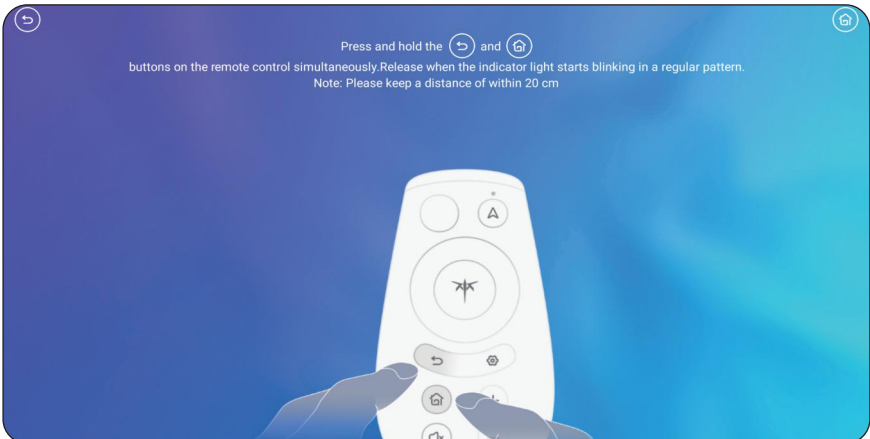


- Follow the prompts on the remote pairing interface to complete the pairing process and enter the system home screen

Basic Operations


If you skip the Bluetooth connection by selecting the home icon “🏠” during the setup wizard, you can later pair the Bluetooth remote control in the settings

2.Go to Settings to pair

- Tap **[Settings]** on the main screen to enter the Settings interface. Tap **[Connected devices]** and select **[Pair new device]**

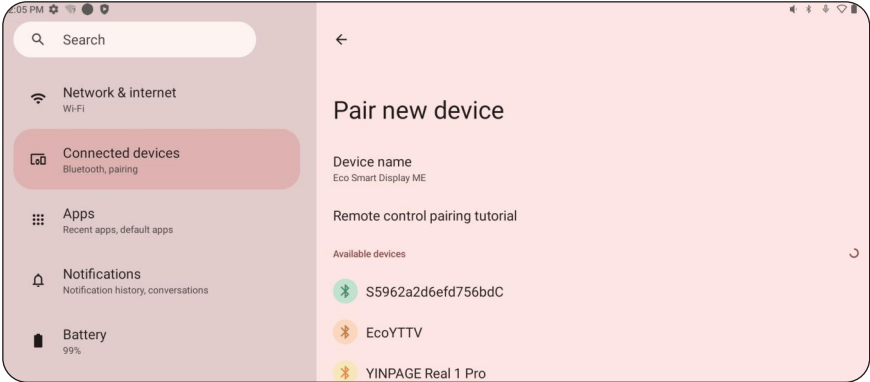

 
- Next, click **[Remote control pairing tutorial]** to enter the remote control pairing interface as shown below

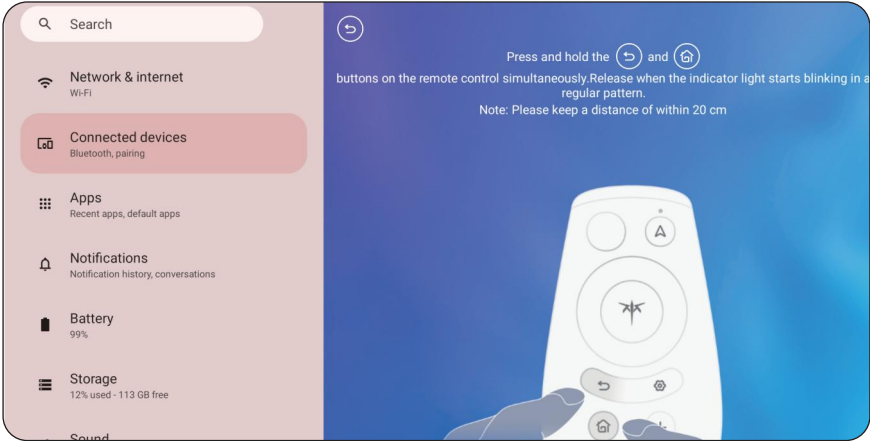

- Follow the prompts on the remote control pairing interface to complete the pairing process


Basic Operations

 *Note: 1. When the remote control and MegPad are paired, pressing any button on the remote will cause the indicator light to flash. If the indicator light does not flash when pressing the remote, check whether the remote control and MegPad are in a paired state

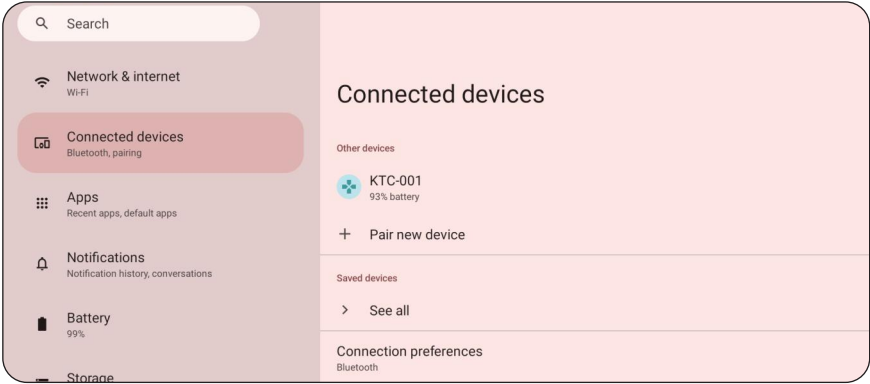

2. If the remote control is in mouse-over mode, the MegPad will wake up when the mouse pointer hovers over it. If you encounter the MegPad waking up immediately after going to sleep, please disable mouse-over functionality

3. If you find the remote control's mouse pointer moving too fast or too slow, you can enter the settings and click **[System-Keyboard-Pointer speed]** to adjust the pointer speed to your preference

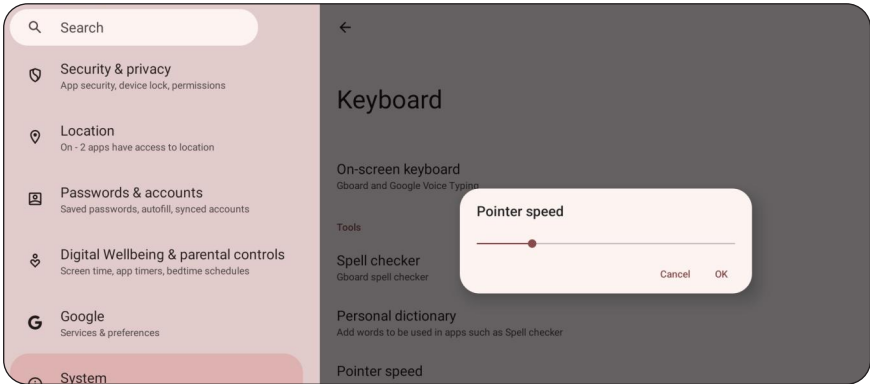

Basic Operations

Remote Control



Flying Squirrel

Toggle the [On/Off] state of the flying squirrel mode.



Return

Return to the previous level.



User settings

Enter settings.



Home Page

Return to the desktop homepage.



Mute

Mute.



Volume

Increase the volume.



Volume

Decrease the volume.



Arrow keys

Up: Switch to the previous page;

Down: Switch to the next page;

Left: Switch to the left page;

Right: Switch to the right page;

⏻ : Confirm the selected content.



Power

Short press: Turn off the screen.

Long press: Enter the [Shutdown Confirmation Page] or wake up the Google Assistant.

(displayed according to the options set in the settings)




Basic Operations

Screen Mirroring


1.Wired screen mirroring

- For external devices that support Type-C screen mirroring (iPhone requires a series of 15 or above to support it), they can be directly connected to MegPad through a dual head Type-C cable (the cable needs to support screen mirroring protocol)

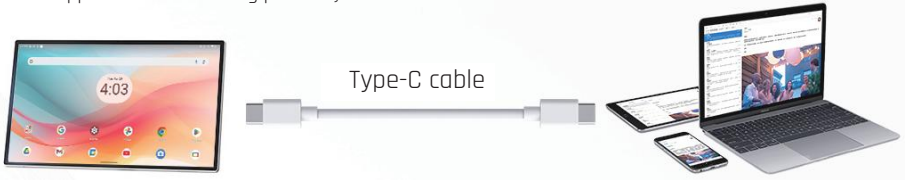


*Note:The Type-C cable is to be purchased separately.

- For external devices with only HDMI interfaces, they need to be connected through an HDMI to Type-C signal converter

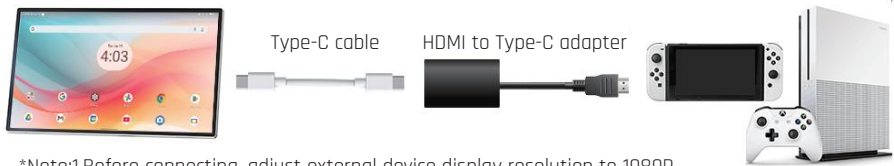

 - *Note:1.Before connecting, adjust external device display resolution to 1080P
- 2.Adapter must support HDMI 2.1 to Dp 1.4 protocol (for 4K@120Hz output) and 48Gbps bandwidth
- 3.After connection, MegPad will automatically pop up the source signal (this process is expected to take 10-20 seconds)

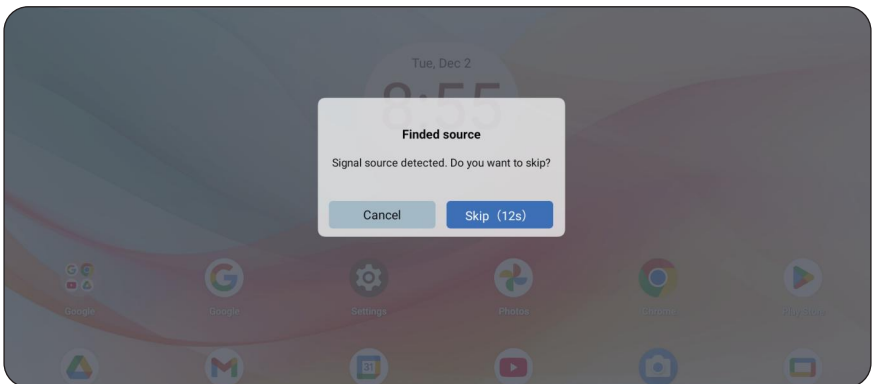

Basic Operations

2. Wireless Screen Mirroring

- Swipe on the main interface to find the Cast application and open it - Wireless screen mirroring supports 4 modes. Choose the desired screen mirroring method based on your own situation

The screenshot shows the Cast application interface with the 'Phone' tab selected. It features two main options: 'iPhone' and 'Android'. The 'iPhone' option displays a smartphone with a 'Screen Mirroring' pop-up. The 'Android' option shows the Android robot icon. Below each option are instructions and a 'Start' button.

Phone Computer APP Video Smart Display PMM

iPhone
Open the Screen Mirroring of the control center
Note: The phone must be connected to the same WIFI as the device

Android
Click the button below to start casting

Start

The screenshot shows the Cast application interface with the 'Computer' tab selected. It features two main options: 'Mac' and 'Windows'. The 'Mac' option displays an Apple logo on a laptop screen. The 'Windows' option shows the Windows logo on a laptop screen. Below each option are instructions and a 'Start' button.

Phone **Computer** APP Video Eco Smart PMM

Mac
Open the Screen Mirroring of the control center
Note: Mac must be connected to the same WIFI as the device

Windows
Click the button below to start casting

Start

The screenshot shows the Cast application interface with the 'APP' tab selected. It features two main options: 'KShare' and a website link. The 'KShare' option displays a QR code. The website link option shows a laptop screen with a URL. Below each option are instructions and a 'Start' button.


Phone Computer **APP** Video Display Eco PMM

KShare
Android mobile phone scans the code to download the APP, and the screen can be cast

Visit the website on the computer to download the KShare client, and you can cast the screen
Website: <https://kshare.link/1044>


Start

Basic Operations

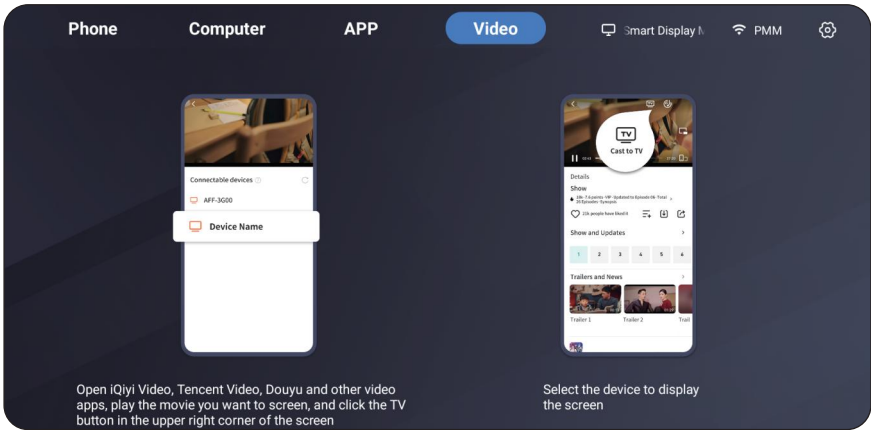

Single double-click wake-up


- MegPad supports clicking to wake up while in sleep mode. You can enter Settings-Display and select [Single tap to wake/Double tap to wake]. Enabling this feature will increase power consumption and shorten MegPad's standby time

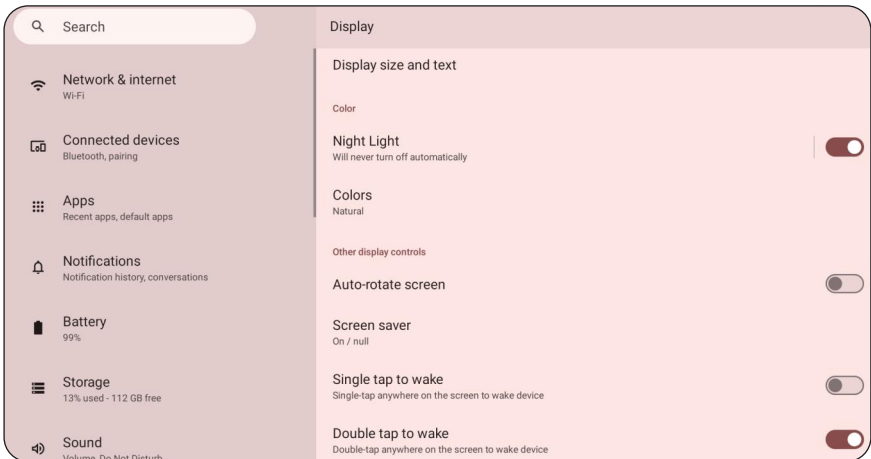

Basic Operations


Color Temperature Adjustment

- MegPad can adjust different color temperatures according to your preferences. Go to Settings - Display
Screen color temperature to choose the color temperature you want, with a total of 15 settings

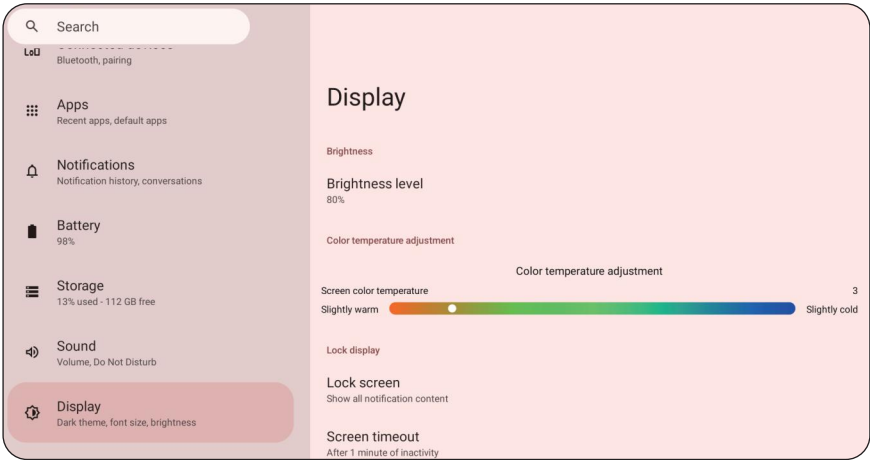

Navigation Bar Mode

 - MegPad currently supports two navigation modes: Gesture navigation/3-button navigation. You can enter Settings - System Navigation mode to choose from

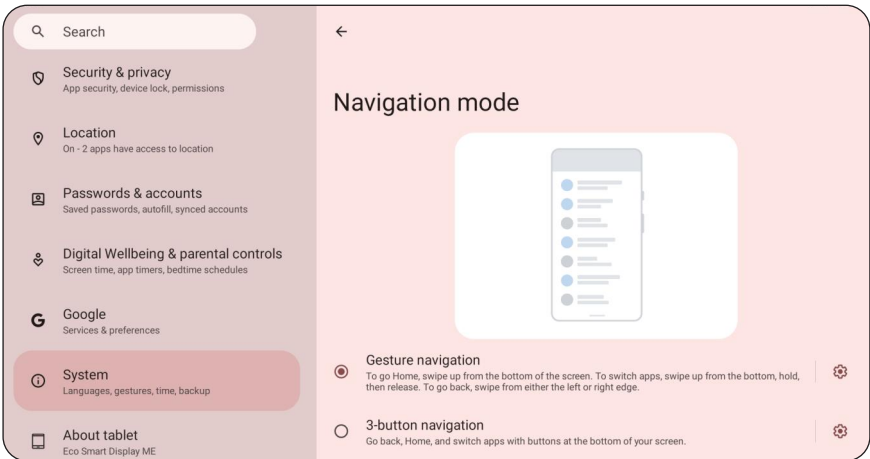


Basic Operations

- The Gesture navigation interface is as follows. In this mode, sliding from the left side of the screen to the right will activate the return function, while sliding up from the bottom of the screen will open the multi taskbar



 
- The 3-button navigation interface is as follows, with function keys at the bottom in this mode

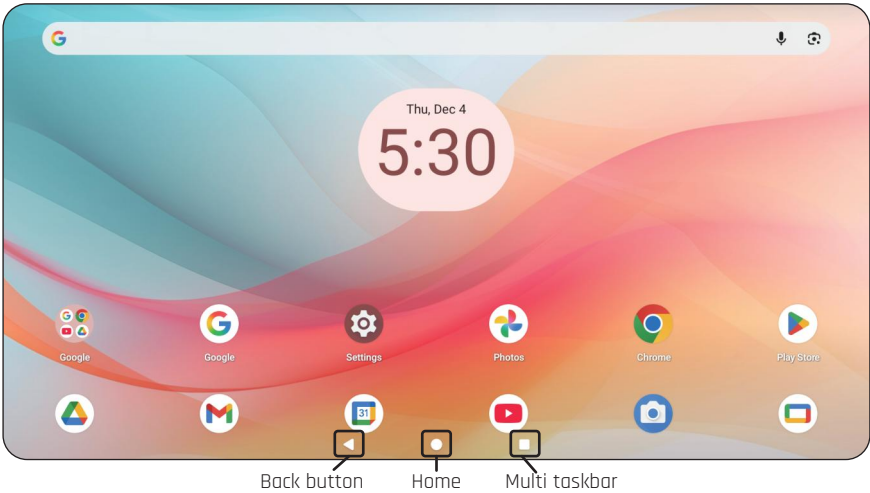


Basic Operations

Application Split Screen


- The MegPad supports left and right screen usage for two applications; Open the applications that you need to split the screen separately, so that both applications can appear in the multi taskbar
- Select one of the apps you want to split in the multi taskbar and long press the icon for that app above

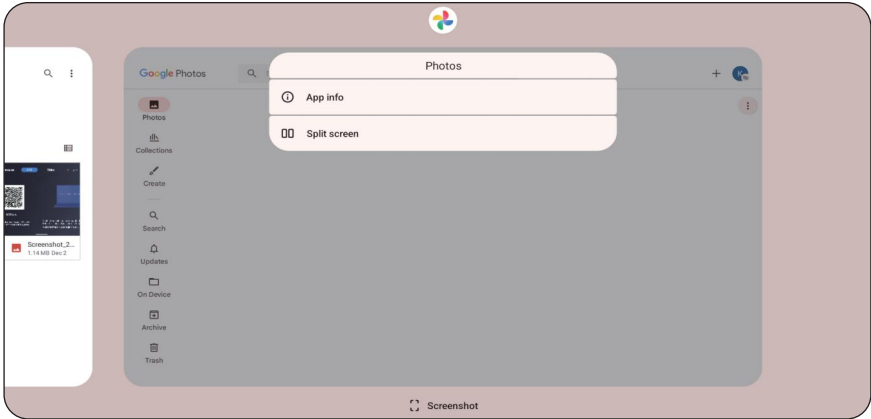

 - Select the other app you want to split the screen with and click on its icon above, and you will display both apps on the screen at the same time

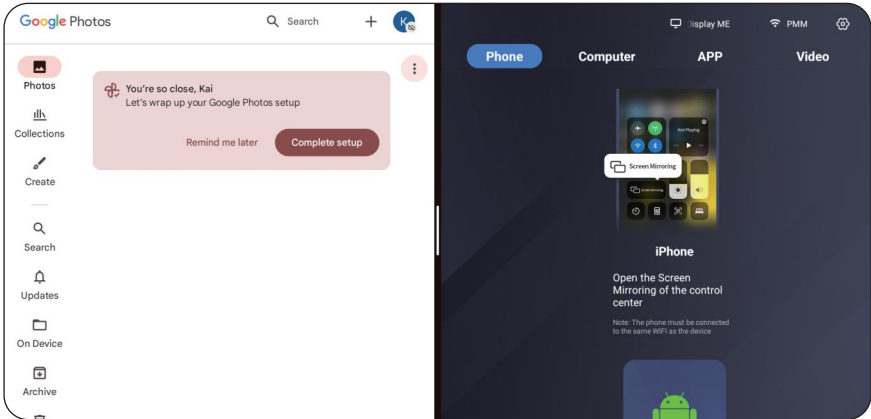

 - You can also adjust the split screen size of the two apps by dragging the white line in the middle

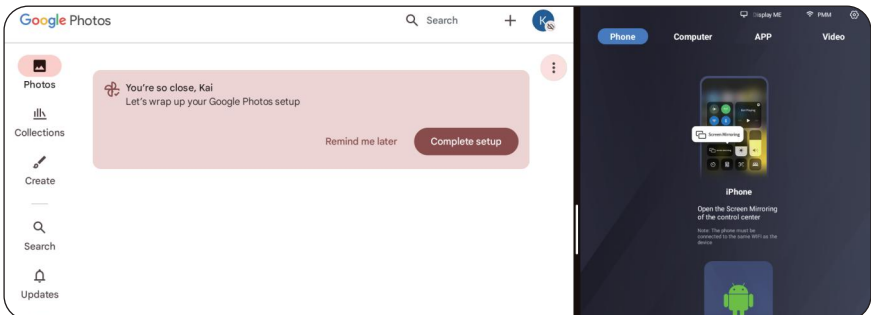

Technical Specifications

Panel size	62.23 cm (24.5 inches)
Maximum Resolution	1920×1080(60Hz)
Panel type	IPS
Backlight type	Side Entry (ELED)
Built-in system	Powered by Android™ 14
Charging interface	19V \equiv 3.42A,65W
Visible area	543.77(H)×302.616 (V)mm
Viewing angle	±89 (H), ±89 (V) (Typ.)
Color Gamut	NTSC 1931 72%(Typ.) 68%(Min)
Center luminance of White	400cd/m ² (Max)
Contrast	1300:1 (Typ.)
Speaker	2*8W/4Ω+2*4W/4Ω
Battery capacity	5000mAh/14.6V(73Wh)
Product interface	Type-c (Full-featured DP-IN, USB2.0, 5V 1A output)
Work environment requirements	
Working temperature and humidity	0 C ~ 40 C 0% ~ 65%(non-condensing)
Storage temperature and humidity	-10 C ~ 50 C 0% ~ 65%(non-condensing)

Low blue light

The light emitted by the screen contains blue light, and keeping the eyes on the screen for long periods of time will not only bring visual fatigue, but also may cause eye diseases. Using the low blue light function will reduce blue light and reduce eye fatigue.

This product uses low blue light hardware.

Eye care recommendations :

- 1) Do not use the product for a long time without interruption, avoid overuse of the eyes, it is recommended that you take a 10 minute break for every 30 minutes of use.
- 2) When taking a break, you can relax your eyes by looking at distant scenery.
- 3) When taking a break, do eye exercises to relax your eyes.
- 4) Infants under the age of 2 should not watch the screen.
- 5) According to your own needs, you can turn on the eye protection mode through the drop-down menu, or enter "Setting - Display" to make settings.



More Information

Please scan QR code or visit US.KTCPLAY.COM

Any question or comments. Please contact:
support@ktcplay.com
support.eu@ktcplay.com [Europe]



KEY TO
COMBAT