



Smart Monitor

KTC A32Q8 Display User Guide



Please read the User Guide carefully and keep it properly. The pictures involved in the User Guide are for reference only, please refer to the actual product for details.

Important Safety Precautions

1. Please read all the instructions carefully before using the product.
2. When cleaning the display, please unplug the power cord. Please wipe the display with a soft wet cloth instead of liquid or spray cleaner. Please use LCD screen cleaner in case of a stubborn stain.
3. Do not use accessories that are not recommended by the manufacturer, or there may be dangerous.
4. When unplugging the power cord of the display or the power adapter, please hold the power plug with your hand rather than directly pull the power cord to unplug it.
5. Do not place the display near water, such as bathtub, washbasin, kitchen sink, or washing machine. Do not place the display on the wet ground, or near the swimming pool. Do not use fingers or hard objects to press the surface of the LCD screen.
6. The grooves and holes on the shell or at the back and bottom of the display are designed for the ventilation and heat dissipation of the components to ensure reliable operation. So, do not put the display on the bed, sofa, carpet, or other similar surfaces to prevent the heat dissipation holes from blocking and do not place the display near or above the radiator or heater. In addition, do not place the display in an embedded device unless adequate ventilation is provided.
7. Only the power supply type shown on the nameplate can be used for the display. Please feel free to consult the display dealer or the local power supply administration, if you have any doubts about your power supply type.
8. For safety, the display or the power adapter uses a power cord with a three-prong plug, whose third prong can only be properly grounded when used with a properly grounded socket. If your socket cannot match with the plug, please contact an electrician to replace your original socket so that the plug can give full play to ensuring safety.
9. As you may face high voltage or other dangers after removing the shell, do not repair the display by yourself. You can have it repaired by qualified maintenance personnel.
10. Please unplug the power cord of the display or the power adapter from the socket, and contact qualified maintenance personnel for repairing the display, when following cases occur:
 - a. The power cord or the plug is damaged or worn out.
 - b. The display has been dropped from high or the shell is damaged.
 - c. Any obvious abnormality indicates a necessary repair.
11. Please place the display in a well-ventilated environment, which is away from strong light, high temperature, or humidity.
12. The room temperature for the display store is $-20^{\circ}\text{C}\sim 55^{\circ}\text{C}$, or it may be permanently damaged.
13. The monitor screen is fragile, so please be careful when moving or handling it!

Product Introduction

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, and YouTube Music are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

Dolby AUDIO Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Before installation, please check whether the following articles are complete in the packing box:

- LCD×1
- Power Adapter×1
- Screwdriver×2
- remote controls×1
- Base×1
- Warranty Card×1
- User Guide×1
- spindle×1
- Power Cord×1
- Signal Cable×1
- screws×3

 
If any of above product is missing, please contact with product distributor immediately.

Note: Specific accessories in order to prevail in kind. Please keep packing materials for future movement.

Simple Problems Disposal

Symptoms	Disposal Methods
1.Blank screen /Power indicator does not work	Check whether the power supply is in good contact with the display and the power socket; and check whether the display is turned off.
2.Blurred , too large or too small images	Go to the "Image Settings" category menu and select "Image Auto Adjust" to make the monitor adjust automatically to correct. (Only available for monitors with VGA)
3.Dark screen	Enter the "Brightness & Contrast" menu to regulate the contrast and the brightness of the display.
4.Display overheating	Leave at least 10cm of ventilated space around the display. Do not place articles on the display.
5.Dark/light spots when powered on	It is normal. Because of the temperature difference in the environment, the backlit tube emits uneven light at the initial stage after the display turns on. However, the backlit tube will emit normal light after 20 minutes, and the dark/light spots will be eliminated at that time.
6.Image distortion, flashing, shaking	Check your computer configuration, choose the correct resolution, and reset your refresh rate.
7.Noisy signal when powered off	During the power-off of the display, there may be some noisy signals on the screen caused by the normal discharge.

Keys And Interfaces

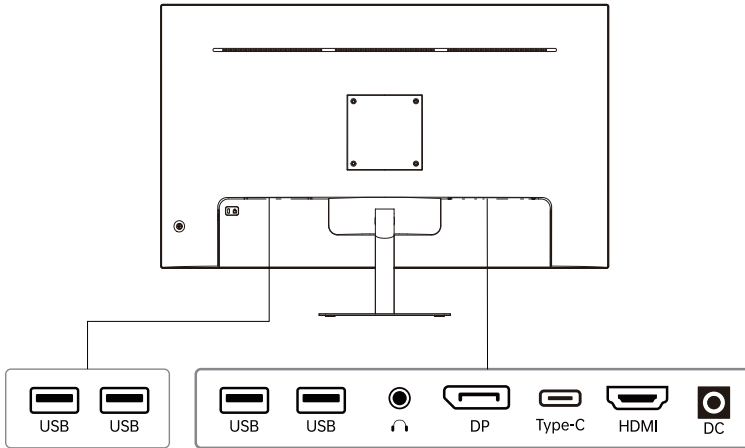


Signal Cable Connection

Connect the signal cable to the HDMI or DP signal output port on the PC, then connect the other end of the signal cable to the corresponding signal input port on the LCD.

Headset Connection

 After connecting the headset, there will be audio output, and it also supports external loudspeakers.

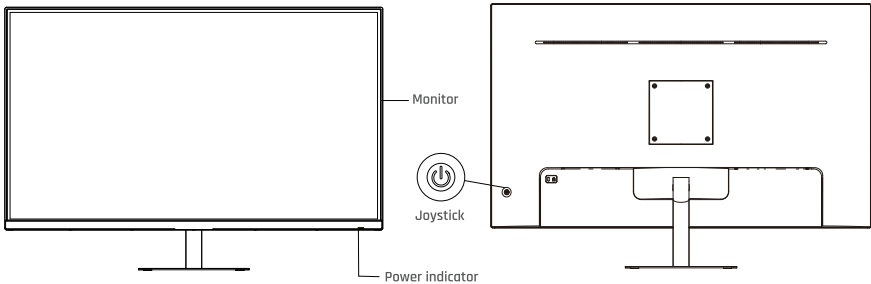

	Initial Shortcut Keys	Enter the Function Menu
↑	volume	Turn up
↓	volume	Turn Down
←	Display and sound	Return Previous Menu
→	Monitor Settings	Open Sub-menu and Select an Option
⊙	Turn on the display by short-pressing. Turn off the display by pressing and holding for 3 seconds.	Select/go to next level menu

 
 
 
 
 
 
Power Indicator

The constant indicator means that the display is in normal operation; the flash indicator represents no signal state. Under the energy conservation state, the display will normally work if the signal is provided again. The display is still powered on in the standby state. Thus, unplug the power cord when you do not use the display for safety.

Base And Wall Mount


1. Base installation procedure:

- Remove the spindle cover and insert the head of the spindle into the rear housing
- Secure the spindle with two screws
- Secure the base to the spindle with another screw
- Install the spindle cover to complete the installation

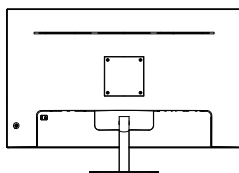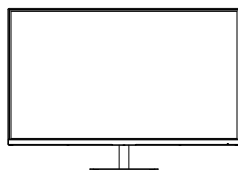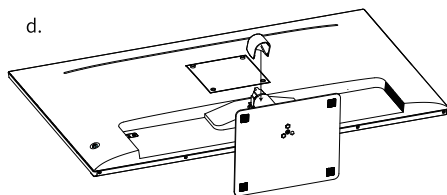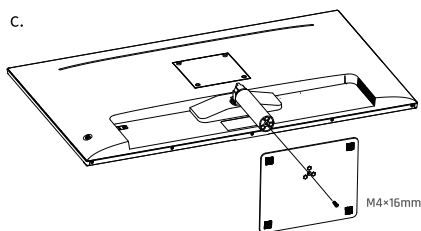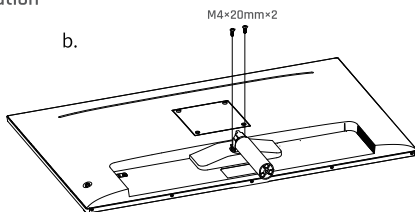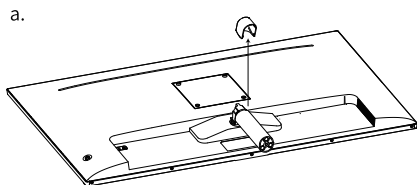


Use M4 screws 100×100mm

 (If you need wall mounting bracket, you need to buy it separately)

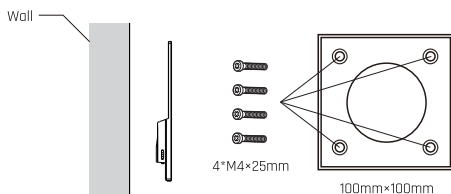

Mounting Location

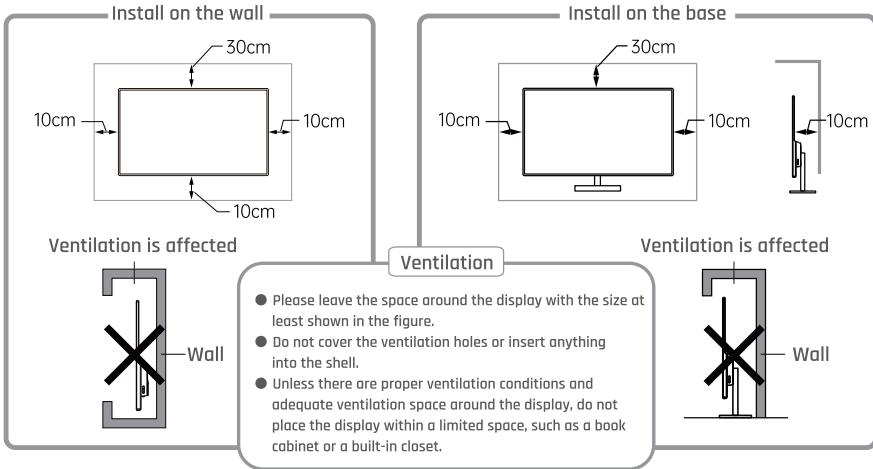 

Installation Guide

- The display should be installed near an AC power socket that can be easily pluggable.
- It is recommended to use suitable wall mount brackets or a base for safety purpose.
- To prevent injury, the display should be placed on a smooth horizontal plane, or fixed on a firm wall.
- If you need to install it on a wall, it should be done by professional technicians. The improper display installation may cause instability.
- Do not place the display where it may be suffered from mechanical vibration.
- Do not place the display where insects may enter.
- Do not place the display directly facing an air conditioner, or the internal panel may condense, leading to faults.
- Do not place the display where there is a strong electromagnetic field, or it will be interfered with and damaged by the electromagnetic waves.

Safety Protection

When the PC video signal exceeds the frequency range of the display, the display will disable the line and field synchronizing signals to protect the display. Under this circumstance, you must set the output frequency of the PC to an acceptable range for the display to work properly.

Product Technical Specifications

Basic Parameters

Panel Dimension	31.5"
Best Operating Resolution Ratio	3840 × 2160 @60Hz
Input Voltage	DC 24V / 7A
Contrast	3000 : 1(Typ.)
Visible Area	697mm × 392mm
Dot distance	0.18159 × 0.18159
Illumination	300cd/m ² (Typ.)
Pitch size for wall mount	100mm × 100mm
Wall mounting screw size	4*M4 × 8 (Use with accessories for studs5)

Refresh rate	60Hz
Gamut	94% DCI-P3 gamut 99% sRGB gamut
Color depth	8bit+FRC
Display Colors	1.07B colors
HDR	HDR10
Angle of view	±89(H), ±89 (V) (Typ.)
Response time	21ms

Interface Information

HDMI	×1 HDMI 2.1 (TMDS) (3840x2160@60Hz)
DP	×1 DP1.4 (3840x2160@60Hz)
Type-C	×1 DP1.4 (3840x2160@60Hz) Output: PD 65W
USB	×4 USB2.0

Power Management System

Power consumption during normal operation	≤168W
Standby power consumption	≤0.5W


Remark: All technical specifications in the User Guide and on the external packing are allowed to change without prior notice.

If there is a subtle difference between the User Guide and the actual operation, the latter shall prevail.

Environmental Element

Atmospheric pressure	86kpa ~ 104kpa
Operating temperature and humidity	0 °C ~ 40 °C 30% ~ 90%
Storage temperature and humidity	-20 °C ~ 55 °C 20% ~ 93%

 remote control

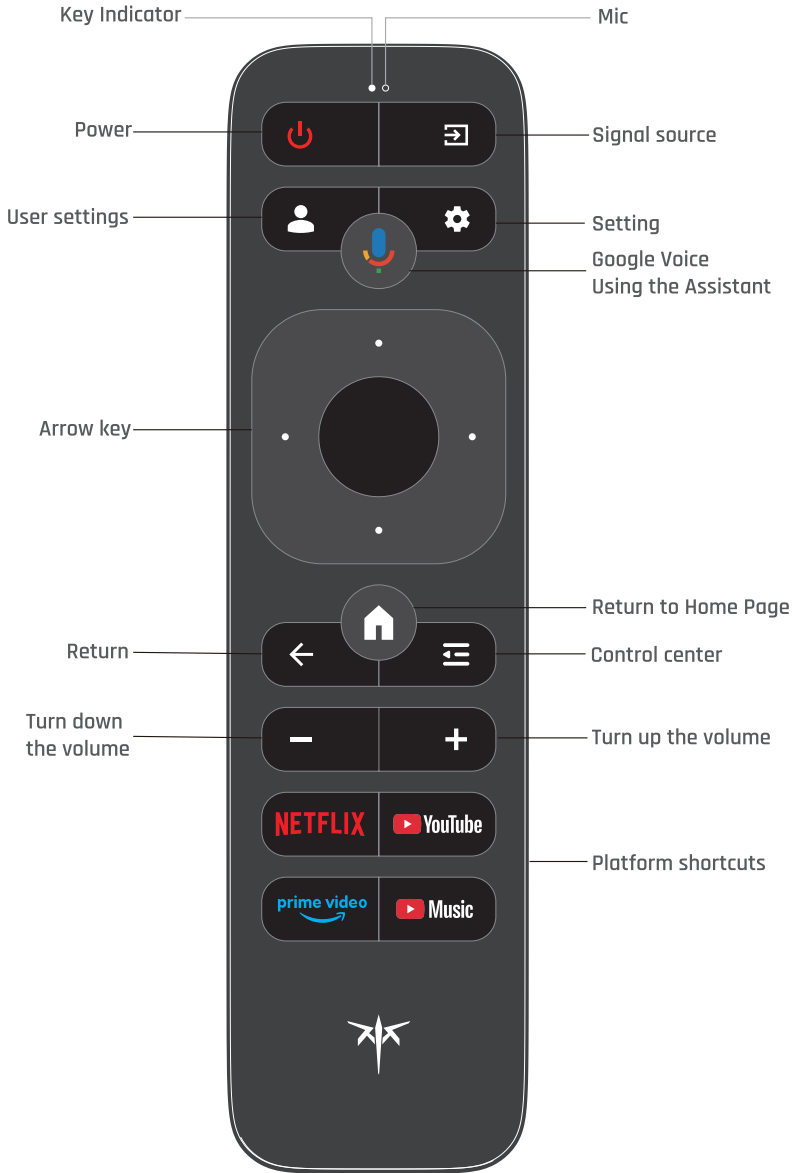


Voice remote control operation manual

Pairing the voice remote control

Note:

1. Some models may not be supported.
2. Your Location must correspond to the language for exact search results. Some functions may not be available if your location settings and language settings are different.
3. You can change the language according to language input settings. The languages available for Google Assistant may be changed in accordance with service operation policy.
4. Details of service may vary by model.
5. Before you use Google Assistant, you should make sure remote control paired.

If the remote control is not paired, press the Google Assistant key, then long press [←] + [↵] keys to pair. When the TV show the device, select it and press [OK] key to finish.

 Microphone / Google Assistant
Ask Google Assistant to find movies, stream apps, play music, control the TV and more - all with your voice.

Press and hold the voice key to recognize the voice.





Product Warranty Card

Customer Name	
Tel	
Address	
Model	
Device Number	
Purchase Date	

Warranty Rules

- 1.We provide you with a three-year free warranty from the date of purchase or as agreed in the contract.
- 2.The following cases are not covered by the warranty:
 - Failure or damages caused by artificial or natural disasters.
 - Failure caused by not following the operation method and precautions written in the User Guide.
 - Failure caused by user disassembly.
- 3.The liability scope of the warranty card is limited to the maintenance of the product, without covering any other liability.
- 4.If you are not sure about the repair and warranty of the machine after the warranty period, please visit the website EN.KTCPLAY.COM for the warranty policy.



Notice: Please fill out the card and return it to us, when you apply for a warranty.



More Information
Please scan QR code or visit **EN.KTCPLAY.COM**

Any question or comments. Please contact:
support@kctcplay.com [North America]
support.eu@kctcplay.com [Europe]

HDMI™

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Manufacturer's address : Floor 1-5, Building 1, No. 4023 Wuhe Avenue, Gangtuo Community,
Bantian, Longgang District, Shenzhen City, Guangdong Province, P.R. China